

LanTan LT330 version up !

Best machine is USB type NC data transfer device

The answer to your request

I became a more safe and secure transfer machine .

Three functions for the safety and security

1 Theft of NC data, - NC data copy guard function

I will prevent the outflow of. The processing technology by loss NC data for G code written in CAM software,

I encrypts through application of LT330 only. While encrypting I set the restore keyword.

Set the keyword to restore individual parameters also LT330 body, Encrypted data

It was restored only in the LT330 body keyword matches, It can be used as data processing. In addition,


The dark of the NC data The issue of time, Dialog of the original data deletion whether execution is displayed.

With that you remove the original data at the same time as the encryption, I will further prevent the outflow of the NC data.



SeErHsSgAtReN
pPmUueUbnUus
KSeBeUusDsUu
tNaVPpPmMoHf
UbnScBeWNeAr
SmBTHeOWGeZ
rBeRbTbCfCWNe
ArTiNbDbHeBNe
CaAtHgRuNbAsS
eScCaGeMoHfU

After you create NC data, encrypt through LT330-only applications. Dialog that you want to delete the original data is displayed on the encryption time Will be. Encryption system is private in our original method.

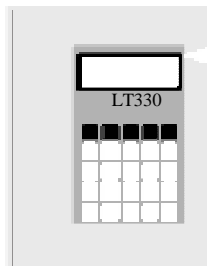

%
G90
G92X0Y0Z10.0
S25000M03
M08
G04X3.0
X17.134Y1.742
F80
G01X17.134Y1.7
X17.068Y1.708Z

Restore the NC data encrypted by keyword set in parameter LT330 body, I will send the NC data.

2 Start of data transfer, - mail transmission function


I will email you with the event of such termination.

Through the settings in advance in advance to LT330, we will email it to you (the start of the data transmission, the end, contact input) when an event occurs that you specify. Be notified the processing end and data transfer for a long time, during processing for a long time in the DNC operation, even if you work in a remote location. I supports SMTP authentication and POP before SMTP.


※ the end of data transmission and processing of LT330 end of the DNC operation is not in the same time.

Time difference depends on the processing content.

※ mail transmission function of the contact input is optional.

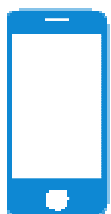

Notify me of transmission start

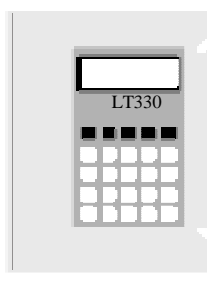

[SET] bottom
In file selection
Was selected, START]
I press the button.



Notify me of the end of transmission

Data transmission complete
or DC3 reception of
data transmission is complete.

3 Even missing the USB memory during data transmission - sending data protection

They can also. LAN is disconnected

When sending the NC data stored in the computer on the network or USB memory , and at the same time executing the transmission It is temporarily stored automatically in the internal memory of the LT330 body . Even if I missed the USB memory data transmission after the start ,Since data transmission will continue even if the LAN ended up being cut , such as network problems , and disrupt the processing in DNC operation Never that .

※ memory area that can be temporary storage automatically vary somewhat depending on the state of the task space (about 100MB memory is approximately


The vinegar) it will be sent not error if you select the data larger than memory area , such as more than 100MB

If you want to send large amounts of data the file selected If you save folder inside of the LT330 (DATA1 ~ DATA9) in advance Please selection . DNC equipment general , if you've missed the LAN cable or USB memory during data transfer , Processing will be interrupted is a communication error .



The LT330, data being transmitted will be temporarily stored in the body automatically LT330 Once all. After saving the data to the main unit, USB memo

Since data transmission will continue LAN is disconnected Lee past the exit, never processing is interrupted during DNC operation.

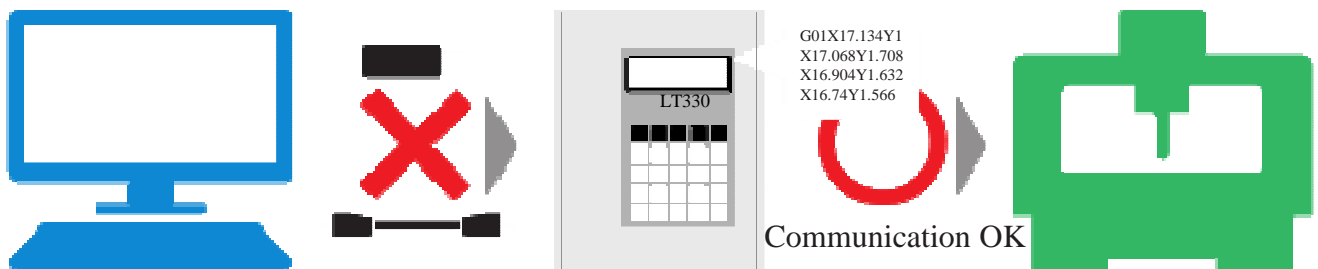

Other key features

Data input and output

File Management

File name display / program content display

Subprogram output

Auto rewind

Division of O save each number

FTP server / file sharing

DHCP client

Parameter settings (control panel / Web browser)

(Can be set up to 10) set directory

Move to the sub-directory

NEW

